



Smoke Zone Sequence

1. Tenant Zone in fire mode: 100% smoke exhaust: 0% supply air.
2. Remaining Tenant zones: Normal HVAC system operation (may be off).
3. Adjacent Mall zones: Goes to 100% outside air supply, no return or exhaust air.
4. Remaining Mall zones: Normal HVAC system operation (may be off).

Note:

Tenants are responsible to fit out ductwork, air terminals, ceilings, etc. in Tenant spaces (typical).